



THERMOCOUPLE TEMPERATURE TRANSMITTER THT201



The Tekon Electronics In Head Temperature
Transmitters are specifically designed to meet
the most rigorous requirements of operation in
the industrial process environments. Due to their
reduced dimensions they can be installed in the
the DIN Form B sensor connection head in place of
traditional terminal blocks.

The operating parameters like the sensor type, connection method, measuring range, output signal range or fault value can be configured using the THT201 user friendly free software Tekon Configurator.

Dimensions 45ø x 23 mm

Weight Approx. 50g

Material Nylon 66

Protection Index IP40

KEY FEATURES

THERMOCOUPLE SENSOR INPUT E, J, K, N, R, S, T

WIDE MEASUREMENT RANGE

4 TO 20 MA ANALOG OUTPUT

2 STATUS LEDS

HIGH MEASUREMENT ACCURACY

IN LINE LOOP CURRENT MEASURE PADS

NAMUR NE 43 FAULT DETECTION

CONFIGURABLE OVER PC
TEKON CONFIGURATOR SOFTWARE



TECHNICAL SPECIFICATIONS

INPUT THERMOCOUPLES (TC)	
Measured variable	Temperature
Sensortype	Thermocouples: E, J, K, N, R, S, T
Units	°C
Connection	Thermocouple (TC)
Sensor current diagnostic	<0,05 mA (50 uA)
Response time	<500 ms
Open-circuit monitoring	Always active (cannot be disabled)
Short-circuit monitoring	Not available
Cold junction compensation (CJC)	Integrated resistance thermometer
Measuring range	Configurable (see "Digital measurement accuracy" table)
Minimum measured span	50°C
Characteristic curve	Temperature-linear

DUTPUT	
Output signal	4 to 20 mA
Power supply (Uaux)	9 to 30V DC
Max. load	(Uaux - 9) / 0.022 A
Overrange	3 to 22 mA
Error signal (e.g. following sensor fault) (conforming to NE43)	Software configurable ≤ 3,6mA or ≥ 21mA
Sample cycle	< 1s
Protection	Against reversed polarity; Surge protection

OPERATING ENVIRONMENT	
Ambient temperature range	-20 to 80°C
Storage temperature range	-20 to 80°C
Relative humidity	≤95%, without condensation

CASING	
Material	Nylon 66
Weight	Approx. 50g
Dimensions	See "Dimensional drawings"
Cross section	2,5 mm ²
Protection type	IP40

CERTIFICATIONS AND APPROVALS	
EN 61326	Electrical equipment for measurement, control and laboratory use. EMC requirements.
IEC 61000-4-2	Electrostatic discharge immunity test
IEC 61000-4-3	Radiated, radio-frequency, electromagnetic field immunity test
IEC 61000-4-4	Electrical fast transient/burst/immunity test
IEC061000-4-5	Surge immunity test



FACTORY DEFAULT SETTINGS	
Sensor	TEK
Measuring range	-200 to 1000°C
Fault current	NAMUR NE 43
Sensor offset	0°C
Sampling	0,5s

MEASURING ACCURACY MEASUREMENT ACCURACY Reference conditions 24V DC \pm 1%Auxiliary power Ambient temperature 23°C Warm up time > 5min TC K Sensor type [-200; 1000]°C Input span Accuracy (according to IEC 61298-2) -0,072%; 0,038% Inaccuracy Max. error -0,066% -0,018% Hysteresis Non-repeatability 0,014% Error in the analog output < 0,08% of span (digital/analog converter) see "Digital measurement accuracy" table Digital measuring errors ± < 0,5°C Error due to internal cold junction

DIGITAL MEASUREMENT ACCURACY THERMOCOUPLES (TC) **SENSOR** RANGE °C DIGITAL ACCURACY °C Ε -200 to 1000 J -210 to 1200 1 -230 to 1370 Κ 1 -200 to 1300 Ν 1 R -50 to 1760 2 S -50 to 1760 2 -200 to 400 Τ 1

<0,3 uV / °C

< +/- 1,6% of span

Influence of ambient temperature

EMC - immunity influence

The digital accuracy is the accuracy after the analog/digital conversion including linearization and calculation of the measured value.


An addicional error is generated in the output current 4 to 20mA as a result of the digital/analog conversation of 0.025% of the set span (digital-analog error).

The total error under reference conditions at the analog output is the sum from the digital error and the digital-analog error (poss. with the addition of cold junction errors in the case of thermocouple measurements).





TECHNICAL DRAWINGS AND INFORMATION

DIMENSIONAL DRAWINGS & INSTALLATION DIAGRAM

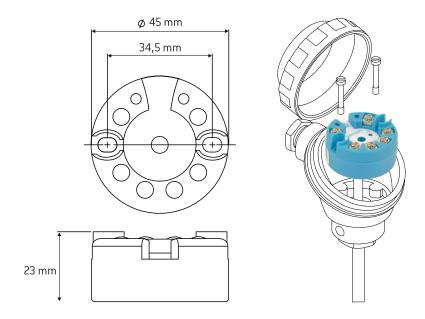


ELECTRICAL CONNECTIONS

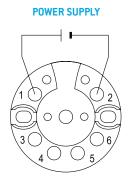

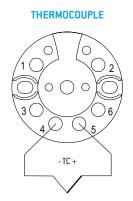

STATUS LEDS

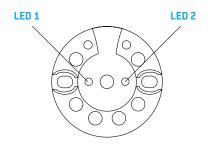


LED 1 (RED)	LED 2 (BLUE)	
OFF	ON	NORMAL MODE
FLASH	ON	SENSOR ERROR
0FF	BLINK	CONFIGURATION MODE



TEST POINTS

The test points may be used to measure the transmitter current comsuption.

Please connect the test probes of multimeter with the DC current measurement option to the test points according to the following image.

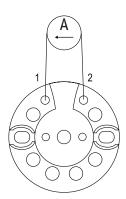

RELATED PRODUCTS



SARC 2 - USB CONFIGURATOR

REF.: PA132720310

 $\label{thm:connection} \mbox{Connection between a PC USB port and THT201 temperature head transmitter;} \mbox{USB powered for easy off-process configuration.}$

REVISION HISTORY	
VERSION	
E01B	In "Measurement Accuracy" table, "Sensor type", "Input span" and "Influence of ambiente temperature" information was added. "Factory Settings" renamed to "Factory Default Settings".



Goudseweg 181b 411 HK Bodegraven , Netherlands 0031(0)172 493141 info@tempco-sensors.nl www.tempco-sensors.nl

Cofinanciado por:





